

Solinst® Discrete Interval Sampler Operating Instructions

Model 425 1" dia.

Operating Principles

The Discrete Interval Sampler (DIS) allows samples to be taken from distinct levels within a well. The sampler is pressurized at the surface to prevent water from entering the device as it is being lowered to the desired sampling depth. The pressure is then released allowing the Discrete Interval Sampler to fill under hydrostatic pressure. The Discrete Interval Sampler is repressurized to maintain chemical stability of the sample as the DIS is retrieved. At the surface, the sample is removed using the Sample Release Device.

SAFETY PRECAUTION Using High Operating Pressures can be Dangerous

For sampling at depths greater than 200 ft. (60 m) below water level use the following method to increase safety.

Before Sampling: Pressurize the sampler to 100 psi (700 kPa) then lower the sampler to a depth of about 160 ft. (50 m) below water.

At that level increase the pressure to the maximum required, as determined when setting the operating pressure. Then lower the sampler to the appropriate level and continue as per the operating instructions.

After Sampling: Raise the sampler to a depth of about 160 ft. (50 m) below water, then decrease the pressure on the sampler to 100 psi (700 kPa). Continue to raise the sampler and follow the instructions to properly remove the sample.

Recommended Operating Pressure

Depth (ft.) below water	Pressure psi	Depth (m) below water	Pressure kPa
25	20	7.6	145
50	30	15.2	220
100	50	30.5	370
200	95	61.0	670
300	140	91.4	965
500	225	152.4	1,565

Discrete Interval Sampler Capacity

Size	Capacity	Size	Capacity
1" x 2 ft.	6 oz	25.4 mm x 610 mm	175 ml
1.66" x 2 ft.	15 oz	38 mm x 610 mm	450 ml
2" x 2 ft.	27 oz	50.8 mm x 610 mm	800 ml

Sampling with the Discrete Interval Sampler

Note: The Sample Release Device NEVER goes down the well.

- Before using the Discrete Interval Sampler, there are two important pieces of information needed.
 - Desired Sampling Depth
 - Static Water Level
- With the tubing connected to the Discrete Interval Sampler, and the air pump assembled, connect the air pump to the Pressure Inlet.
- Turn the Pressurize/Vent Valve to Pressurize.
- At this point you must make a calculation to ensure that you are operating at the proper pressure using one of the following formulas, or the chart at lower left.

Setting the Operating Pressure

Feet	Meters
Sampler depth below grade (ft.) - static water level below grade (ft.) $\times 0.43 + 10$ psi	Sampler depth below grade (m) - static water level (m) $\times 9.8 + 70$ kPa

Example

Sampling Depth is 100 ft. - Static Water Level at 30 ft.
 $\times 0.43 + 10$ psi = 40 psi
 Therefore the Discrete Interval Sampler should be pressurized to 40 psi for proper operation.

- Using the air pump, pressurize the Discrete Interval Sampler to the required pressure.
- Disconnect the air pump from the reel before lowering sampler into the well.
- Lower the Discrete Interval Sampler down the well to the desired sampling depth. If you have not marked your tubing, you may want to attach a measuring tape or Tag Line (See Model 103 Data Sheet) to the Lowering Bracket to measure to the proper sampling depth.
- Once the sampler is at the desired sampling depth, turn the Pressurize/Vent Valve to Vent. Wait for 1-3 minutes to allow the Discrete Interval Sample to fill.
- Turn the Pressurize/Vent Valve to Pressurize.
- Connect the air pump to the Pressure Inlet on the reel and repressurize the system as determined in step 4.
- Once pressurized, disconnect the air pump and bring the sampler to the surface.
- When the sampler is at the surface, and you are ready to retrieve your sample, turn the Pressurize/Vent Valve to Vent.
- Hold the Discrete Interval Sampler over your sample bottle and press the Sample Release Device Stem up into the Lower Check Ball Body until sample begins to flow from the sampler. The flow rate can be regulated by simply adjusting the amount of the Stem inserted into the Lower Check Ball Body.

Note: If no sample is coming out of the Discrete Interval Sampler, loosen the Compression Fitting to allow venting and then take your sample.

Assembly

1. Push the V-010 o-ring inside the Bottom Platen.
2. Place a V-203 o-ring inside the Bottom Platen.
3. Ensure a V-116 o-ring is installed over the Bottom Platen.

Note: The Teflon check ball sinks in water.
The Polypropylene ball floats in water.

4. Drop the Teflon check ball into the Bottom Platen.
5. Push a Check Ball Retainer into the Bottom Platen until it seats.
6. Thread the Bottom Platen into the Sampler Body until finger tight.
7. Place the other V-203 o-ring into the Top Platen.
8. Ensure there is a V-116 o-ring installed over the Top Platen.

Note: The Polypropylene check ball floats in water.
The Teflon ball sinks in water.



9. Drop the Polypropylene check ball into the Top Platen.
10. Push the other Check Ball Retainer into the Top Platen until it seats.
11. Thread the Top Platen into the Sampler Body until finger tight. Ensure the Compression Fitting is threaded into the Top Platen.
12. Attach the tubing by tightening the compression fitting nut to the compression fitting until finger tight. Using a wrench tighten until snug (no more than 1/8 or 1/4 turns).

Decontamination

The Discrete Interval Sampler should be decontaminated after each sampling event.

1. Disassemble the Sampler.
2. Wash all Discrete Interval Sampler parts in a phosphate-free soap.
3. Rinse all parts thoroughly with deionized water and dry.
4. Reassemble the Sampler

Tubing Connection (Compression Fitting) Assembly

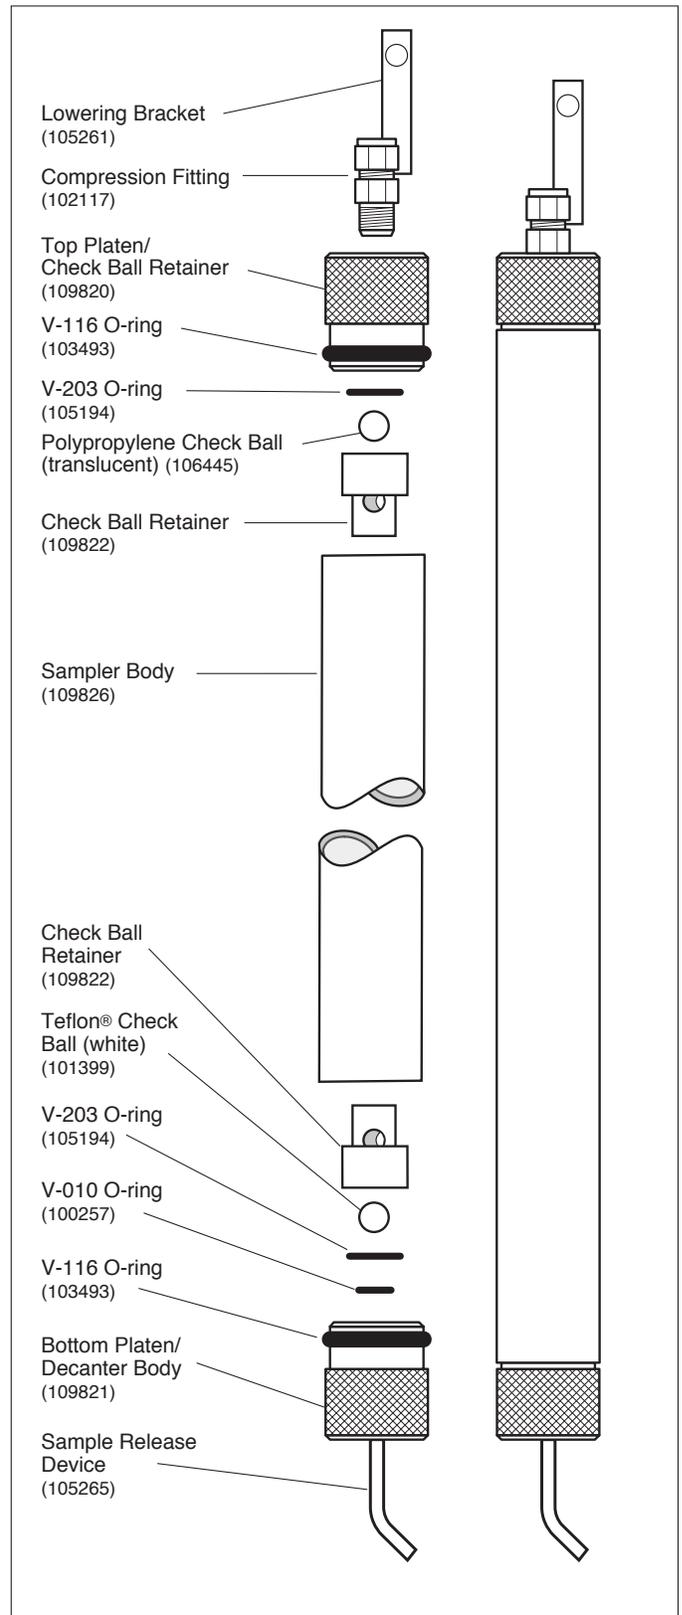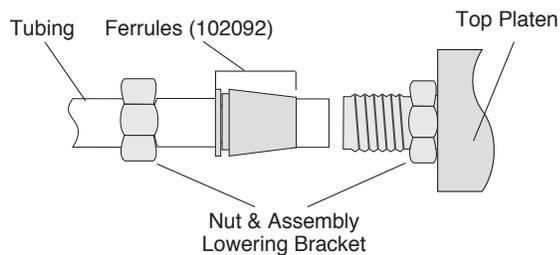

Model 425 1" dia. x 2 ft. Discrete Interval Sampler (109824)